

MARIANNE'S RENTALS

Special Event Solutions

SNO-CONE MACHINE INSTRUCTIONS

IMPORTANT INFORMATION

The Sno-Kone Machine consists of the motor, shaving unit and dispensing case. The motor has a toggle switch mounted on it. There is a separate switch on the light inside the case.

On the end of the motor shaft is mounted the cutterhead which is inside of the shaver body.

Going down into the shaver body is the pusher handle which presses the ice against the revolving cutterhead which shaves the ice.

CAUTION: Machine must be properly grounded to prevent shock in case of electrical problems. The motor is 110 volt, single phase, 60 cycle, AC current.

TO OPERATE MACHINE

1. Start the motor and fill the shaver body with ice cubes or block ice broken into pieces 3" to 4" in size. Fill to about an inch or so from the top. The larger the piece of ice, the better the snow.
2. Push the pusher handle down to press the ice against the cutterhead. A firm even pressure is all that is required, but sometimes you will find it better to relieve the pressure two or three times on the way down. This lets the ice rearrange itself and you get a better bite.
3. Do not force the handle too much as the motor could be stalled.
4. When too much pressure is necessary, relieve the handle and then come down again. Too much pressure on the pusher handle will make the ice come out coarse; too little pressure makes the ice mushy.

In normal operations the motor gets warm. A surface temperature of 150° is normal.

CAUTION

Do not let any metal get down in the shaver body or you will ruin the blades.

Never put your fingers or any objects into the shaver body while the motor is running. Disregard for these instructions and careless handling will result in accidents and/or injury.

CLEANING

Always unplug the machine before cleaning. Wipe all surfaces clean before returning to Marianne's Rentals.